

run show copp statistics

The **run show copp statistics** command displays the statistics information of the forwarding class, including input and dropped packets and rate.

Command Syntax

run show copp statistics [**active** | **forwarding-class** *forwarding-class-name*]

Parameter

Parameter	Description
active	Optional. Specifies state of the forwarding class. With this parameter, only shows the statistics information of the active forwarding class.
forwarding-class <i>forwarding-class-name</i>	Optional. Specifies forwarding class name, the value is a string type, spaces are not allowed.

Example

- Show the statistics information of the forwarding class.

```
admin@Xorplus# run show copp statistics
All Copp Traffic statistics:
Input rate 272 bits/sec, 0 packets/sec
Input Packets.....1
Input Octets.....153
Drop rate 0 bits/sec, 0 packets/sec
Drop Packets.....0
Drop Octets.....0

arp-class Traffic statistics:
forwarding-class state: inactive
Input rate 0 bits/sec, 0 packets/sec
Input Packets.....0
Input Octets.....0
Drop rate 0 bits/sec, 0 packets/sec
Drop Packets.....0
Drop Octets.....0

copp-class1 Traffic statistics:
forwarding-class state: active
Input rate 0 bits/sec, 0 packets/sec
Input Packets.....0
Input Octets.....0
Drop rate 0 bits/sec, 0 packets/sec
Drop Packets.....0
Drop Octets.....0

.....
```