

VLAN Configuration Commands

This section contains descriptions of the CLI commands that this chapter references.

- `vlan-interface interface <interface-name> router-advertisement disable`
- `vlan-interface interface vif address prefix-length`
- `vlan-interface interface vif description`
- `vlan-interface loopback address <ip-address> prefix-length`
- `vans dot1q-tunneling egress from`
- `vans dot1q-tunneling egress then action`
- `vans dot1q-tunneling egress then service-vlan`
- `vans dot1q-tunneling ingress from double-tag service-vlan`
- `vans dot1q-tunneling ingress from one-tag customer-vlan-list`
- `vans dot1q-tunneling ingress from untag enabled`
- `vans dot1q-tunneling ingress then`
- `vans vlan-id`
- `vans vlan-id description`
- `vans vlan-id l3-interface`
- `vans vlan-id vlan-name`
- `show vlan-interface`
- `show vlan-interface interface`
- `show vlags`
- `run clear vlan-interface statistics loopback`
- `vlan-interface interface <interface-name> dhcp <boolean>`
- `set vlan-interface interface interface mtu`