

system login user class

To set permissions for a user, use the **system login user class** command in L2/L3 configuration mode. By default, a newly created user account is **read-only**. To delete a user, use the **delete** form of the command.

Command Syntax

```
set system login user username class [ read-only | super-user ]  
delete system login user username class
```

Parameters

username	The name of the user.
read-only	(Optional) This keyword gives view-only or read-only permissions to user. This is the default option.
super-user	(Optional) This keyword gives all permissions to user. The default option is read-only .

Example

The following example configures a **super-user** account named alpha:

```
admin@Switch# set system login user alpha class super-user
```