

# set protocols dot1x interface authentication-open disable

The **set protocols dot1x interface authentication-open disable** command enables open authentication function on a specified interface.

## Command Syntax

**set protocols dot1x interface** *<interface-name>* **authentication-open disable** *<true | false>*

## Parameters

Parameter	Description
<b>interface</b> <i>&lt;interface-name&gt;</i>	Specifies the physical interface name. The value could be ge-1/1/1, xe-1/1/2, and so on.
<b>disable</b> <i>&lt;true   false&gt;</i>	Configures whether to enable or disable the open authentication function. The value is <b>true</b> or <b>false</b> . <ul style="list-style-type: none"><li><b>true</b>: disables the open authentication function.</li><li><b>false</b>: enables the open authentication function.</li></ul> The default value is <b>true</b> .

## Usage Guidelines

With open authentication function, only DHCP packets are allowed on the specified port to make Client could get IP address before any authentication has succeeded.

## Example

- Enable the open authentication function on ge-1/1/1.

```
admin@Xorplus# set protocols dot1x interface ge-1/1/1 authentication-open disable false
```