

# set protocols dot1x aaa radius dynamic-author client

The **set protocols dot1x aaa radius dynamic-author client** command configures IP address of the RADIUS dynamic authorization client (DAC) for Change of Authorization (CoA) function.

RADIUS dynamic authorization client could be the same RADIUS authentication server configured in **set protocols dot1x aaa radius authentication server-ip <ip-address> [shared-key <key-string>]** command or it could be a different one.

## NOTE:

This command is supported from PICOS 2.11.16.

## Command Syntax

**set protocols dot1x aaa radius dynamic-author client <client-ip>**

## Parameter

Parameter	Description
<b>client &lt;client-ip&gt;</b>	Specifies the IP address of the RADIUS dynamic authorization client. This component often resides on the RADIUS server.

## Example

- Configure the client for CoA function.

```
admin@Xorplus# set protocols dot1x aaa radius dynamic-author client 10.10.10.1
admin@Xorplus# commit
```