

set protocols dot1x aaa radius dynamic-author client shared-key

The **set protocols dot1x aaa radius dynamic-author client shared-key** command configures the IP address and the shared key of the RADIUS dynamic authorization client (DAC) for Change of Authorization (CoA) function.

NOTE:

This command is supported from PICOS 2.11.16.

Command Syntax

set protocols dot1x aaa radius dynamic-author client *<client-ip>* **shared-key** *<key-string>*

Parameter

Parameter	Description
client <i><client-ip></i>	Specifies the IP address of the RADIUS dynamic authorization client. This component often resides on the RADIUS authentication server.
shared-key <i><key-string></i>	Specifies the shared key of the RADIUS dynamic authorization client. The value is a string type. Note: The value of shared key should be the same as the one configured on the RADIUS dynamic authorization client.

Example

- Configure the IP address and the shared key of the RADIUS dynamic authorization client.

```
admin@Xorplus# set protocols dot1x aaa radius dynamic-author client 10.10.10.1 shared-key pica8123
admin@Xorplus# commit
```