

Combinated-mode Command

ovs-vsctl set-combinated-mode <TRUE/FALSE>

Enable combinated mode to deal with VCAP/ICAP flow conflict, only half of TCAM flow number can be used.

ovs-vsctl show-combinated-mode

Show whether combinated-mode is enabled or not.