

set system aaa radius authorization server-ip port

The `set system aaa radius authorization server-ip port` command configures port number of a RADIUS authentication and authorization server.

Command Syntax

`set system aaa radius authorization server-ip <ip_address> port <integer>`

Parameter

Parameter	Description
<code>server-ip <ip_address></code>	Specifies the IP address of RADIUS authentication and authorization server. The value could be an IPv4 or IPv6 address.
<code>port <integer></code>	Specifies a port of a RADIUS authentication and authorization server. The value is an integer type. The default value is 1812. Note: The value of port number should be the same with that on the RADIUS servers.

Example

- Configure the port number of a RADIUS authentication and authorization server.

```
admin@XorPlus# set system aaa radius authorization server-ip 10.10.50.41 port 2
admin@XorPlus# commit
```