

set system aaa local disable

The **set system aaa local disable** command enables the local authentication function.

Command Syntax

set system aaa local disable <true | false>

Parameter

Parameter	Description
disable <true false>	Configures whether to enable or disable the local authentication function. The value is true or false . true : disables the local authentication function. false : enables the local authentication function. The default value is true .

Example

- Enable the local authentication function.

```
admin@XorPlus# set system aaa local disable true
admin@XorPlus# commit
```