

# show system serial-number

The **show system serial-number** command shows the serial number of Motherboard, RPSU, and SFP module.

## Command Syntax

```
run show system serial-number
```

## Example

- This example demonstrates how to show system serial-number:

```
admin@XorPlus# run show system serial-number

MotherBoard Serial Number : TW0WYGRVDNT0097I0015

RPSU 1 Serial Number      : N/A
RPSU 2: Not ready

SFP+   te-1/1/49          :
        Vendor Name       : Hisense
        Vendor PartNr     : LTF8502-BC+
        Serial Number     : CN56GMC2S0
        Module Type       : 10G_BASE_SR
        Cable Length      : 300m

SFP    te-1/1/50          :
        Vendor Name       : FiberStore
        Vendor PartNr     : SFP1G-LX-31
        Serial Number     : F174CO01408
        Module Type       : 1G_BASE_LX
        Cable Length      : 10km

SFP    te-1/1/51          :
        Vendor Name       : FiberStore
        Vendor PartNr     : SFP1G-LX-31
        Serial Number     : F174CO01641
        Module Type       : 1G_BASE_LX
        Cable Length      : 10km

SFP+   te-1/1/52          :
        Vendor Name       : 3M
        Vendor PartNr     : 1410-P17-00-3.00
        Serial Number     : Y30B220863
        Module Type       : 10G_BASE_AOC
        Cable Length      : 30m
```