

set system management-ethernet eth0 ip-address {IPv4 | IPv6}

The `set system management-ethernet eth0 ip-address {IPv4 | IPv6}` command sets a static IP address for management interface eth0.

Command Syntax

`set system management-ethernet eth0 ip-address {IPv4 | IPv6} <ip_address>`

Parameter

Parameter	Description
<code>{IPv4 IPv6} <ip_address></code>	<p>Specifies the IP address for management interface eth0.</p> <p>When assigning an IPv4 address, the value is in dotted decimal notation.</p> <p>When assigning an IPv6 address, the value is a 32-digit hexadecimal number, in the format X:X:X:X:X:X:X, an X contains 4 hexadecimal numbers.</p>

Example

- Set the IP address 192.168.10.5/24 for management interface eth0.

```
admin@Xorplus# set system management-ethernet eth0 ip-address IPv4 192.168.10.5/24
admin@Xorplus# commit
```