

run show dot1x all

The `run show dot1x all` command displays the NAC information.

Command Syntax

`run show dot1x all`

Parameter

None.

Example

- Run `run show dot1x all` command to view the NAC information.

```
admin@Xorplus# run show dot1x all
Global-Info:
-----
NAS-IP           : 10.10.1.1
Block-VLAN       : 2
Block-VLAN-IP    : 172.16.1.1/24
WEB-AUTH-MODE    : Remote
Server-Fail-VLAN : 100
-----
```

Table 1 Description of the `run show dot1x all` command output

Item	Description
NAS-IP	Indicates the NAS IP address which is set to the L3 VLAN interface IP connected to the RADIUS server.
Block-VLAN	Indicates the VLAN ID for block VLAN.
Block-VLAN-IP	Indicates the IP address of the L3 block VLAN interface.
WEB-AUTH-MODE	Indicates the Web authentication mode, the value is Remote .
Server-Fail-VLAN	Indicates the VLAN to which the user ports will be added to when all the configured RADIUS servers are unreachable.