

set protocols igmp-snooping enable

The **set protocols igmp-snooping enable** command is used to enable or disable the global IGMP snooping function.

Command Syntax

set protocols igmp-snooping enable <true | false>

Parameter

Parameter	Description
enable <true false>	Enable or disable the global IGMP snooping function. The value is true or false . <ul style="list-style-type: none">• true: enables the global IGMP snooping function.• false: disables the global IGMP snooping function. The default value is false .

Usage Guidelines

After the global IGMP snooping is enabled, IGMP snooping in the VLAN is disabled by default. To enable IGMP snooping in a VLAN, you also need to enable the VLAN-based IGMP snooping function via **set protocols igmp-snooping vlan-id enable** command.

Example

- Enable the global IGMP snooping function.

```
admin@Xorplus# set protocols igmp-snooping enable true
admin@Xorplus# commit
```