

set protocols dot1x server-fail-vlan-id

The **set protocols dot1x server-fail-vlan-id** command configures a server fail VLAN.

Command Syntax

set protocols dot1x server-fail-vlan-id *<vlan-id>*

Parameter

Parameter	Description
server-fail-vlan-id <i><vlan-id></i>	Specifies the VLAN ID for a server fail VLAN. The value is an integer that ranges from 2 to 4094.

Example

- Configure the server fail VLAN ID to 200.

```
admin@Xorplus# set protocols dot1x server-fail-vlan-id 200
admin@Xorplus# commit
```