

run show policer

The **run show policer** command displays the policer configuration information.

Command Syntax

run show policer

Parameter

None.

Example

- Run **run show policer** command to view the policer configuration information.

```
admin@Xorplus# run show policer
policer      rate limit  burst limit  count mode  action
-----
p1           5000        0            kbit       discard
```