

run show interface egress-buffer

The **run show interface egress-buffer** command displays the configuration information for the buffer management.

Command Syntax

run show interface egress-buffer

Parameter

None.

Example

- Display the configuration information for the buffer management.

```
admin@Xorplus# run show interface egress-buffer
Queue UC-Enabled UC-Shared-Ratio MC-Enabled MC-Shared-Ratio
0      true      33          false    --
1      true      33          false    --
2      true      33          false    --
3      true      33          false    --
4      true      33          false    --
5      true      33          false    --
6      true      33          false    --
7      true      33          false    --
```