

set system aaa radius authorization server-ip shared-key

The **set system aaa radius authorization server-ip shared-key** command configures shared-key of a RADIUS authentication and authorization server.

Command Syntax

set system aaa radius authorization server-ip *<ip_address>* **shared-key** *<string>*

Parameter

Parameter	Description
server-ip <i><ip_address></i>	Specifies IP address of RADIUS authentication and authorization server. The value could be an IPv4 or IPv6 address.
shared-key <i><string></i>	Specifies the shared key of RADIUS authentication and authorization server. The value is a string type. Note: The value of shared key should be the same with that on the RADIUS servers.

Example

- Configure the shared key of RADIUS authentication and authorization server.

```
admin@XorPlus# set system aaa radius authorization server-ip 10.10.50.41 shared-key test123
admin@XorPlus# commit
```