

# protocols sflow source-address

---

Users can set the source address as the source in packets transmitted to collectors.

## Command Syntax

set protocols sflow source-address <IPv4>

## Parameter

- <IPv4>source address as the source in packets transmitted to collectors

## Example

- This example is to set source-address to 10.10.50.248:

```
admin@XorPlus# set protocols sflow source-address 10.10.50.248
admin@XorPlus# commit
```