

# set protocols mlag domain peer-ip peer-link

---

The **set protocols mlag domain peer-ip peer-link** command configures peer IP address and peer link port.

## Command Syntax

**set protocols mlag domain** *<domain-id>* **peer-ip** *<peer-ipv4-address>* **peer-link** *<peer-interface-name>*

## Parameters

Parameter	Description
<b>domain</b> <i>&lt;domain-id&gt;</i>	Specifies a domain ID. The value is an integer that ranges from 1 to 255.
<b>peer-ip</b> <i>&lt;peer-ipv4-address&gt;</i>	The IP address of the remote MLAG peer link port. The value is in dotted decimal notation.
<b>peer-link</b> <i>&lt;peer-interface-name &gt;</i>	The interface name of the peer link that is on the peer device, it should be a LAG port.

## Example

- Configure peer IP address and peer link port.

```
admin@Xorplus# set interface mlag domain 3 peer-ip 10.10.10.1 peer-link ae1
```