

interface gigabit-ethernet <port> crossflow local-control

User can configure a crossflow port in local-control mode or not.

Command Syntax

```
set interface gigabit-ethernet <port> crossflow local-control <bool>
delete interface gigabit-ethernet <port> crossflow local-control
```

Parameter

- <port> a physical port or a LAG
- <bool> set local control
 - **true** enable local control, **default** mode
 - **false** disable local control

Example

- This example is to configure a crossflow port ge-1/1/3 not in local control:

```
admin@XorPlus# set interface gigabit-ethernet ge-1/1/3 crossflow local-control false
admin@XorPlus# commit
```