

interface max-acl-rule-limit <egress/ingress>

This command is to set max acl rule counter .

Command Syntax

```
set interface max-acl-rule-limit <egress/ingress> <acl-counter>
delete interface max-acl-rule-limit egress
delete interface max-acl-rule-limit ingress
```

Parameter

- <egress/ingress> the in/out mode of a port
 - **egress** Set max egress acl rule count
 - **ingress** Set max ingress acl rule count
- <acl-counter> max egress or ingress acl counter identifier. Egress:,the counter is [0..256].ingress:[0..896]

Example

- This example is to max ingress ACL counter is 400

```
admin@XorPlus# set interface max-acl-rule-limit ingress 400
admin@XorPlus# commit
```