

protocols bfd interface <interface> min-echo-receive-interval

Users can set min-echo-receive-interval.

Command Syntax

```
set protocols bfd interface <interface> min-echo-receive-interval <uint>  
delete protocols bfd interface <interface> min-echo-receive-interval
```

Parameter

- <interface> The vlan interface, e.g. vlan20
- <uint> Required Minimum Echo RX Interval

Example

- This example configures min-echo-receive-interval to 2 for vlan4:

```
admin@XorPlus# set protocols bfd interface vlan4 min-echo-receive-interval 2  
admin@XorPlus# commit
```