

set system ntp source-interface

The **set system ntp source-interface** command configures the local source interface that sends NTP packets.

Command Syntax

set system ntp source-interface *<vlan-interface>*

Parameter

Parameter	Description
source-interface <i><vlan-interface></i>	Specifies an L3 VLAN interface as the NTP source interface. The value is a string. Indicates the local interface that sends the NTP packets.

Usage Guidelines

Configure the local source interface for sending/receiving NTP packets, so that the IP address of another interface on the device cannot be used as the destination address of a reply packet, which is convenient for a user to subsequently deploy a flow control policy.

Note: If the NTP source interface is configured, the source interface will be used for the NTP connection.

Example

- Configure the local source interface that sends NTP packets.

```
admin@Xorplus# set system ntp source-interface vlan100
admin@Xorplus# commit
```