

protocols sflow disable

By default, sFlow is disabled. Users can enable sFlow and configure its' parameters.

Command Syntax

```
set protocols sflow disable <bool>  
delete protocols sflow disable
```

Parameter

• <bool> Disable sflow on all interfaces by default

- **true** Disable sflow
- **false** enable sflow

Example

• This example is to enable sflow on all interface:

```
admin@XorPlus# set protocols sflow disable false  
admin@XorPlus# commit
```