

set ip routing enable

The **set ip routing enable** command configures whether to enable or disable IP routing function.

NOTE:

Layer 3 packets cannot be forwarded normally if IP routing function is disabled.

Command Syntax

set ip routing enable [true | false]

Parameter

Parameter	Description
enable [true false]	Configures whether to enable or disable IP routing function. The value is true or false . true : enables the IP routing function. false : disables the IP routing function. The default value is false .

Example

- Disable the IP routing function.

```
admin@Xorplus# set ip routing enable false
admin@Xorplus# commit
```

- Enable the IP routing function.

```
admin@Xorplus# set ip routing enable true
admin@Xorplus# commit
```