

# show vlan-interface

---

This command displays information about all vlan interfaces.

## Command Syntax

run show vlan-interface <text>

## Parameter

- <text> The special information. Options include:
  - **brief** Show all vlan-interface briefly
  - **default: none** Show all vlan-interface

## Example

- This example shows vlan-interface briefly:

```
admin@XorPlus# run show vlan-interface brief
Interface      Vlan ID      Status      Addr
-----
loopback       4095         UP          127.0.0.1/32
               :1/128
               fe80::ca0a:a9ff:104:4928/64
vlan4001       4001         UP          192.168.10.1/24
               fe80::ca0a:a9ff:204:4928/64
vlan4003       4003         UP          192.168.30.1/24
               fe80::ca0a:a9ff:304:4928/64
```