

# protocols bgp damping disable

---

Users can enable or disable bgp damping.

## Command Syntax

set protocols bgp damping disable *<bool>*

## Parameter

• *<bool>* disable damping

- **true** disable damping
- **false** enable damping

## Example

• This example is to disable bgp damping:

```
admin@XorPlus# set protocols bgp damping disable true
admin@XorPlus# commit
```