

protocols rip interface vif address accept-non-rip-requests

To accept RIP requests from non-RIP interfaces, use the **set protocols rip interface vif address accept-non-rip-requests** command in L2/L3 configuration mode.

Command Syntax

set protocols rip interface *interface-name* **vif** *vif-name* **address** *ip-address* **accept-non-rip-requests** { **true** | **false** }

Parameters

<i>interface-name</i>	Interface name.
<i>vif-name</i>	Virtual interface name.
<i>ip-address</i>	Virtual interface IP address for RIP.
true	Accept RIP requests from non-RIP interface.
false	Do not accept RIP requests from non-RIP interface.

Example

This example configures the switch to accept RIP requests from a non-RIP port:

```
admin@Switch# set protocols rip interface vlan2 vif vlan2 address 192.168.1.1 accept-non-rip-requests true
```