

show class-of-service <text>

The **show class-of-service** command displays information about QoS configured on switch. User can display the interface, trust-mode, local-priority, queue-schedule, and the code-point information. The default queue-schedule is SP.

Command Syntax

run show class-of-service <text>

Parameter

- <text> The special information. Options include:
 - **Interface:** Show class of service on specified interface

Example

- This example shows class-of-service:

```
admin@XorPlus# run show class-of-service
Interface Trust-mode Local-priority Queue-Schedule Code-points
-----
ge-1/1/1 ieee-802.1 3 WRR,5 3
```