

set system aaa radius authorization server-ip

The **set system aaa radius authorization server-ip** command configures IP address of a RADIUS authentication and authorization server.

Command Syntax

set system aaa radius authorization server-ip *<ip_address>*

Parameter

Parameter	Description
server-ip <i><ip_address></i>	Specifies IP address of RADIUS authentication and authorization server. The value could be an IPv4 or IPv6 address.

Example

- Configure IP address of a RADIUS authentication and authorization server.

```
admin@XorPlus# set system aaa radius authorization server-ip 10.10.50.41
admin@XorPlus# commit
```