

set protocols dot1x aaa radius accounting disable

The **set protocols dot1x aaa radius accounting disable** command enables or disables user accounting function when performing NAC authentication.

NOTE:

RADIUS accounting applies only to 802.1X and MAB authentication procedures.

Command Syntax

set protocols dot1x aaa radius accounting disable <true | false>

Parameter

Parameter	Description
disable <true false>	Enables or disables user accounting function when performing NAC authentication. The value could be true or false . <ul style="list-style-type: none">• true: disables user accounting function.• false: enables user accounting function. By default, user accounting function is enabled.

Example

- Enable user accounting function when performing NAC authentication.

```
admin@Xorplus# set protocols dot1x aaa radius accounting disable false
admin@Xorplus# commit
```