

set protocols spanning-tree mstp configuration-name

The **set protocols spanning-tree mstp configuration-name** command configures the MST region name of the switching device.

Command Syntax

set protocols spanning-tree mstp configuration-name *<configuration-name>*

Parameter

Parameter	Description
configuration-name <i><configuration-name></i>	Specifies the MST region name. The value is a string.

Usage Guidelines

MST region name is used to distinguish MST regions. Two switching devices belong to the same MST region only when they have the following same configurations:

- MST region name
- Mappings between MSTIs and VLANs
- MST region revision level

Example

- Configure the MSTP bridge configuration name.

```
admin@Xorplus# set protocols spanning-tree mstp configuration-name mstp1
admin@Xorplus# commit
```