

# system login user admin class

---

User can configure the user admin is a read-only account. The newly created user account, by default, is read-only.

## Command Syntax

```
set system login user admin class <limit>
delete system login user admin class
```

## Parameter

<limit> Configure the permission as read-only or super-user. Required select include:

- **read-only** permissions[view]
- **super-user** permission[all]
- Default value: read-only

## Example

- This example demonstrates how to configure the user admin as super-user:

```
admin@XorPlus# set system login user admin class super-user
admin@XorPlus# commit
```