

run show arp inspection dhcp-binding

The **run show arp inspection dhcp-binding** command displays the ARP inspection table. This table includes the ARP entries generated from the DHCP snooping or DHCP relay table.

Command Syntax

```
run show arp inspection dhcp-binding
```

Parameter

None.

Example

- Display the ARP inspection table.

```
admin@Xorplus# run show arp inspection dhcp-binding
Vlan  IP Address      Mac Address
----  -
  2    100.1.1.1        14:18:77:18:2c:b9
```