

# VRRP Commands

---

- `set protocols vrrp interface vif vrid`
- `set protocols vrrp interface vif vrid disable`
- `set protocols vrrp interface vif vrid version`
- `set protocols vrrp interface vif vrid ip`
- `set protocols vrrp interface vif vrid priority`
- `set protocols vrrp interface vif vrid interval`
- `set protocols vrrp interface vif vrid preempt enable`
- `set protocols vrrp interface vif vrid load-balance disable`
- `set protocols vrrp interface vif vrid load-balance virtual-mac time-interval`
- `set protocols vrrp interface vif vrid accept disable`
- `set protocols vrrp interface vif vrid authentication type`
- `set protocols vrrp interface vif vrid simple-key`
- `set protocols vrrp interface vif vrid md5-key`
- `run show vrrp`