

run show arp

The **run show arp** command is used to view all IPv4 ARP entries.

Command Syntax

run show arp [*vrf <vrf-name>*]

Parameter

Parameter	Description
vrf <i><vrf-name></i>	Optional. Specifies a VRF name. The value is a string.

Usage Guidelines

When a VRF is specified, only the IPv4 ARP entries of the specific VRF are displayed.

When no VRF is specified, the result shows only the IPv4 ARP entries of the default VRF.

Example

- View all IPv4 ARP entries.

```
admin@Xorplus# run show arp
Aging-time(seconds): 1200
Total count          : 1
Address      HW Address      Type      Interface  Age
-----
20.20.20.3   70:72:CF:9D:6F:FB  Dynamic  vlan20     591
```