

set protocols vrrp interface vif vrid md5-key

The **set protocols vrrp interface vif vrid md5-key** command configures the authentication key in MD5 authentication mode for a VRRP group.

NOTE:

VRRP authentication is only supported by VRRPv2, which is not supported by VRRPv3.

Command Syntax

set protocols vrrp interface *<interface-name>* **vif** *<vif-name>* **vrid** *<virtual-router-id>* **md5-key** *<md5-key>*

Parameter

Parameter	Description
interface <i><interface-name></i>	Specifies the Layer 3 interface name of VRRP device. The value is a string.
vif <i><vif-name></i>	Specifies the VLAN interface name. The value is a string.
vrid <i><virtual-router-id></i>	Specifies the VRID of a VRRP group. The value is an integer that ranges from 1 to 254.
md5-key <i><md5-key></i>	Specifies the authentication key in MD5 authentication mode. The value is a string of 1 to 16 case-sensitive characters without spaces.

Usage Guidelines

NOTE:

Devices in a VRRP group must be configured with the same authentication mode and authentication key; otherwise, the VRRP group cannot negotiate the Master and Backup states.

Example

- Configure the authentication key in MD5 authentication mode for a VRRP group.

```
admin@Xorplus# set protocols vrrp interface vlan100 vif vlan100 vrid 2 md5-key picos123
admin@Xorplus# commit
```