

protocols snmp v3 group <text> read-view <text>

Users can configure a read-view for a group



A user in the group which is configured with read-view only can be read by NMS while cannot be written or send trap-messages. Writing and notifying authority can be gained by NMS only after you configure the corresponding view.

Command Syntax

```
set protocols snmp v3 group <text1> read-view <text2>
```

```
delete protocols snmp v3 group <text1> read-view
```

Parameter

- <text1> the name of the user
- <text2> the name of the read-view

Example

- This example configures a read-view name for a group

```
admin@XorPlus# set protocols snmp v3 group group1 read-view view1
admin@XorPlus# commit
```