

run show dot1x interface statistics gigabit-ethernet

The **run show dot1x interface statistics gigabit-ethernet** command displays the 802.1X statistics information on an interface.

Command Syntax

run show dot1x interface statistics gigabit-ethernet *<interface-name>*

Parameter

Parameter	Description
gigabit-ethernet <i><interface-name></i>	Specifies the physical interface name. The value is a string.

Example

- Run **run show dot1x interface statistics gigabit-ethernet** command to display the 802.1X statistics information on interface ge-1/1/1.

```
admin@Xorplus# run show dot1x interface statistics gigabit-ethernet ge-1/1/1
Interface ge-1/1/1:
=====
Client MAC : 00:11:22:33:44:55
-----
SENT:
  EAPOL LogOff Packets : 0
  EAPOL EAP Packets    : 0
  EAP Request Packets  : 0
  EAP Response Packets : 0
  EAP Success Packets  : 0
  EAP Failure Packets  : 0
  Radius Packets       : 2
-----
RECEIVED:
  EAPOL Start Packets : 0
  EAPOL LogOff Packets : 0
  EAPOL EAP Packets    : 0
  EAP Request Packets  : 0
  EAP Response Packets : 0
  EAP Success Packets  : 0
  EAP Failure Packets  : 0
  Radius Packets       : 1
```