

Displaying the Current Configuration

In L2/L3, non-default configuration can be displayed with the **show** commands. The command **show all** displays the default value of the current configuration. Default configurations are shown in the `pica_default.boot` file. The command **show running-config** displays the configuration active on the system.

```
admin@XorPlus# show
vlangs {
vlan-id 200 {
}
}
admin@XorPlus#
admin@XorPlus# show all
vlangs {
vlan-id 200 {
description: ""
vlan-name: "default"
l3-interface: ""
}
}
```

```
admin@XorPlus> show running-config
vlangs {
    vlan-id 200 {
    }
}
```