

Display Setting Configuration

This command displays which settings the configuration has set by default and which settings need to set manually.

```
admin@XorPlus# show | display set
set interface ethernet-switching-options analyzer test input ingress ge-1/1/2
set interface ethernet-switching-options analyzer test input egress ge-1/1/2
set interface ethernet-switching-options analyzer test output "ge-1/1/3"
```

```
admin@XorPlus# show | display set
  set vlans vlan-id 11
  set vlans vlan-id 22
admin@XorPlus#
admin@XorPlus# set vlans vlan-id 33
admin@XorPlus# set vlans vlan-id 44
admin@XorPlus# set vlans vlan-id 55
admin@XorPlus# show | display set
  set vlans vlan-id 11
  set vlans vlan-id 22
> set vlans vlan-id 33
> set vlans vlan-id 44
> set vlans vlan-id 55
admin@XorPlus# com
Merging the configuration.
Commit OK.
Save done.
admin@XorPlus# show | display set
  set vlans vlan-id 11
  set vlans vlan-id 22
  set vlans vlan-id 33
  set vlans vlan-id 44
  set vlans vlan-id 55
admin@XorPlus#
```