

run show pim rps

The `run show pim rps` command shows information about the RPs at a PIM router.

Command Syntax

`run show pim rps`

Parameter

None.

Example

- Show information about the RPs at a PIM router.

```
admin@Xorplus# run show pim rps
Group          RP          Type      Pri  Holdtime  Timeout
-----
225.0.0.1     2.2.2.2    bootstrap 192  150       90
```

Table 1 Description of the `run show pim rps` command output

Item	Description
Group	Multicast group address.
RP	RP address.
Type	Indicates that RP type, the value could be static or bootstrap, where bootstrap indicates a dynamic RP.
Pri	Priority of the RP.
Holdtime	Holdtime of the RP.
Timeout	Amount of time left before a PIM relationship times out with RP.