

set ip vrf

The **set ip vrf** command creates a VRF.

Command Syntax

set ip vrf <vrf-name> [description <string>]

Parameter

Parameter	Description
vrf <vrf-name>	Specifies a VRF name. The value is a string of 1 to 15 case-sensitive characters; spaces are not supported. Note: <ul style="list-style-type: none">• Keywords mgmt-vrf, default, vlan.1, ..., vlan.4094, eth0 and eth1 cannot be configured as a VRF name.• A switch supports a maximum of 128 VRFs.
description <string>	Optional. Add description information for the VRF. The value is a string.

Example

- Create a VRF vrf1.

```
admin@Xorplus# set ip vrf vrf1 description east
admin@Xorplus# commit
```