

# vxlan vni <text> flood vtep <ipv4-addr> mac-address

---

User can configure the flood vtep address set static mac address for vni.

## Command Syntax

```
set vxlan vni <text> flood vtep <ipv4-addr> mac-address <macaddr>
```

```
delete vxlan vni <text> flood vtep <ipv4-addr> mac-address <macaddr>
```

## Parameter

- <text> VXLAN segment ID, decimal format ranges 1-16777215 or notation dotted format 100.100.200
- <ipv4-addr> IPv4 address of vxlan vtep.
- <macaddr> Static mac address identifier

## Example

- This example demonstrates how to configure the VXLAN flood vtep address set static mac address is 00:e0:fc:00:0a:0b for the VNI

```
XorPlus# set vxlan vni 10010 flood vtep 20.20.20.1 mac-address 00:e0:fc:00:0a:0b
XorPlus# commit
```