

VRRP Commands

- `set protocols vrrp interface vrid`
- `set protocols vrrp interface vrid disable`
- `set protocols vrrp interface vrid version`
- `set protocols vrrp interface vrid ip`
- `set protocols vrrp interface vrid priority`
- `set protocols vrrp interface vrid interval`
- `set protocols vrrp interface vrid preempt enable`
- `set protocols vrrp interface vrid load-balance disable`
- `set protocols vrrp interface vrid load-balance virtual-mac time-interval`
- `set protocols vrrp interface vrid accept disable`
- `set protocols vrrp interface vrid authentication type`
- `set protocols vrrp interface vrid simple-key`
- `set protocols vrrp interface vrid md5-key`
- `run show vrrp`