

# run show pim traffic

---

The **run show pim traffic** command shows the traffic statistic information about the PIM multicast group.

**run clear pim traffic** command is used to clear the traffic statistic information about the PIM multicast group.

## Command Syntax

**run show pim traffic**

## Parameter

None.

## Example

- Show the traffic statistic information about the pim multicast group.

```
admin@Xorplus# run show pim traffic
PIM Traffic Counters

                Received                Sent
Hello                172                118
Join-Prune           27                 30
Graft                 0                 0
Graft Ack.           0                 0
Data Register        0                 0
Register Stop        0                 0
Assert               2                 10
BSR Message          0                 0
Candidate-RP Adv.    0                 0

Errors:
Malformed Packets                0
Bad Checksums                    0
Packets received on PIM-disabled Interface 0
Packets received with Unknown PIM Version  0
Packets received with Unknown PIM Type     0
Packets received from Unknown PIM Neighbor 1
```