

protocols sflow sampling-rate egress

Users can set the sampling rate of sflow agent.

Command Syntax

```
set protocols sflow sampling-rate egress <value>  
delete protocols sflow sampling-rate egress
```

Parameter

- <value>the rate at which exiting packets must be sampled, 2000 by default,[0..1048576]

Example

- This example is to set sampling rate of egress to 1000:

```
admin@XorPlus# set protocols sflow sampling-rate egress 1000  
admin@XorPlus# commit
```