

# Set CLI

We support setting some values for CLI.

```
admin@XorPlus> set cli ?
Possible completions:
idle-timeout Set maximum idle time before login session ends
screen-length Set terminal screen length
terminal Set terminal type
admin@XorPlus> set cli screen-length ?
Possible completions:
<length> Number of lines of text that the terminal screen displays (0..10,000).
admin@XorPlus> set cli ?
Possible completions:
idle-timeout Set maximum idle time before login session ends
screen-length Set terminal screen length
terminal Set terminal type
admin@XorPlus> set cli idle-timeout 0
admin@XorPlus> set cli screen-length ?
Possible completions:
<length> Number of lines of text that the terminal screen displays (0..10,000).
admin@XorPlus> set cli screen-length 0
admin@XorPlus>
admin@XorPlus> set cli terminal ?
Possible completions:
ansi ANSI-compatible terminal
linux Linux-compatible terminal
vt100 VT100-compatible terminal
xterm Xterm window terminal
admin@XorPlus> set cli terminal
```