

Configuring IPFIX

Configuring IPFIX Parameters

By default, IPFIX is disabled. You can enable IPFIX and configure its parameters, as shown below. Make sure the switch can connect to the IPFIX collector server correctly.

```
admin@XorPlus# set protocols ipfix collector 192.168.2.10 udp-port 9999
admin@XorPlus# set protocols ipfix interfaces ingress ge-1/1/1
admin@XorPlus# commit
Waiting for merging configuration.
Commit OK.
Save done.
admin@XorPlus#
```