


Configuring User Account and Login Banner

There are two types of user accounts: **super-user** and **read-only**. The newly created user account, by default, is read-only.

NOTE:

 "net-admin" is not allowed to use when configuring a username.

Creating a User Class and Password

```
admin@XorPlus# set system login user ychen authentication plain-text-password pica8
admin@XorPlus#set system login user ychen class super-user
admin@XorPlus# commit
Commit OK.
Save done.
admin@XorPlus#
```

Configuring a Login Announcement after Login

```
admin@XorPlus# set system login announcement "welcome the switch-1101"
admin@XorPlus# commit
Commit OK.
Save done.
admin@XorPlus#
```

Configuring a Multi-line Login Announcement after Login

The following example configures a multi-line announcement which will be printed on the terminal after user login.

```
admin@XorPlus# set system login multiline-announcement 1 message
"*****"
admin@XorPlus# set system login multiline-announcement 2 message "Welcome to the system"
admin@XorPlus# set system login multiline-announcement 3 message
"*****"
admin@XorPlus# commit
Commit OK.
Save done.
admin@XorPlus#
```

Configuring a Login Banner before Login

```
admin@XorPlus# set system login banner "Hello! Welcome!"
admin@XorPlus# commit
Commit OK.
Save done.
admin@XorPlus#
```

Configuring a Multi-line Login Banner before Login

The following example configures a multi-line banner which will be printed on the terminal before user login.

```
admin@Xorplus# set system login multiline-banner 1 message "*****NOTICE*****"
admin@Xorplus# set system login multiline-banner 2 message "This is a property of Pica8."
admin@Xorplus# set system login multiline-banner 3 message "All users log-in are subject to company monitoring!"
admin@Xorplus# set system login multiline-banner 4 message "*****"
admin@Xorplus# commit
```